 


Mixed Punching Guide

SIAC card

Numbered
8000001 to 8999999
(if using a GPS watch, wear on different wrist from SIAC)



Contactless punching at controls and Finish, dib elsewhere

(battery check made when issued)

Battery Test Box (dib, wait for beep)

- Does NOT switch SIAC battery on
- 1 beep: battery OK
- 5 beeps: battery weak, OK for 3-4 events¹
- No beep: battery flat, replacement required at SIAC hire (at registration)

Clear Box (dib, wait for beep) Check Box (dib, wait for beep)

- Checks card is cleared
- Activates SIAC battery (card flashes faint green every 10 secs)

SIAC Test Box

- Swipe within 50cm of box
- SIAC will flash red and beep 3 times²
- Box will **not** flash or beep
- Confirms battery in SIAC is activated

Punching Start

- Dib to start
- Starts SIAC timer
- Records who has started

Control Box

- Swipe within 50cm of box
- SIAC will flash red and beep 3 times²
- Control will **not** flash or beep

Finish Box

- Swipe within 50cm of box
 - SIAC will flash red, beep and turn off
 - End Box (only if remote Finish)**
 - Dib End box which flashes and beeps (only do this after SIAC no longer flashes or beeps from the Finish box)
- (provides consolidated record of all finishers)

- Dib at Download



HIRE?

ARENA EXIT
if remote Start
or
PRE START
if not

PRE START

IN START LANES

START LINE



CONTROLS



FINISH



DOWNLOAD

Non-SIAC card

All other SI numbers



Traditional punching (dibbing) everywhere

(battery check not required)

- No check required

Clear Box (dib, wait for beep) Check Box (dib, wait for beep)

- Checks card is cleared

- No check required

Punching Start

- Dib to start
- Starts SI timer
- Records who has started

Control Box

- Dib box which flashes and beeps

Finish Box

- Dib Finish box which flashes and beeps

End Box (only if remote Finish)

- Dib End box which flashes and beeps (provides consolidated record of all finishers)

- Dib at Download

¹ If the battery fails on a course, normal dibbing can be used